

Improved Accuracy

WV478-2000



DC Powered Frequency Input Isolating Signal Conditioner

High Accuracy Signal Conditioner with an Isolated DC Voltage or Current Output



- RoHS Compliant
- Touch Cal for Best Stability and Accuracy
- DIP Switch Configuration

Description

The Ultra SlimPak II is an exciting new line of isolating signal conditioners from Action Instruments with greater accuracy and better stability than virtually any other signal conditioners on the market today. The Ultra SlimPak II features Smart Power, which eliminates wasted power for low loop resistance loads in the current output mode.

Lower Power Requirements with SmartPower

Bussed Power with Plug-in Power Clips

Removable Terminals for Easy Service

The WV478 accepts a frequency of up to 10kHz, with a minimum input span of 2Hz. The input amplitude can range from 150mVp to 150Vrms.

Smart Power

The Ultra SlimPak II uses Smart Power to control its output supply. Smart Power automatically adjusts the the voltage to drive the output loop to the required current. A low impedance current loop will subsequently require less voltage than a loop with higher impedance. Previous designs provided only a single supply at the highest voltage required to drive the highest impedance load. Using Smart Power results in power savings and reduces the operating temperature of the signal conditioner.

Enhanced LED Diagnostics

Other than when executing the pushbutton calibration routine, the LEDs blink under the following conditions:

GREEN:

Flashes at 2Hz when the input is under range. Flashes at 8Hz when the input is over range.

RED:

Flashes at 2Hz when the output is under range. Flashes at8Hz when the output is over range.

An Under Range condition exists when the signal is lower than the operational low value minus 6.25% of the operational span. An Over Range condition exists when the signal is higher than the operational high value plus 6.25% of the operational span.

A voltage output short circuit may cause an under range condition (RED blinking at 2Hz rate). A current output open circuit may cause an over range condition (RED blinking at an 8Hz rate).

There could be two or more LEDs blinking at the same time, which means the module has more than one error condition. Only when all error conditions have been removed, will the LEDs be back to normal (Green ON, Red and Yellow Off).



Configuring Modules

Unless otherwise specified, the factory presets the Model WV478 as follows:

Input: Frequency Range: 0-1000Hz

Sensitivity: Low (set at 1Vrms)

Output: DC Current Range: 4-20mA Remote Cal: Off

- 1. For other ranges, refer to the SWITCH SETTINGS table. Reconfigure switches S1 and S2 for the desired input type and range.
- 2. Set position 1 of S1 to ON if a WVC16 will be utilized and remote calibration capability is desired.
- 3. Set position 2 and 3 of S1 for the desired output type.
- 4. Set position 4 of S1 to ON for reverse output operation.
- 5. Set position 1 of S2 for the desired input sensitivity.

It is also possible to remotely select the setpoints using an Ethernet connection and the optional WVC16 WebView Communications Interface module.

Calibration


See the calibration flowchart in Figure 3. The complete calibration procedure is contained in the Installation & Calibration Instructions document, which is available on our website (www.actionio.com). You can also obtain it by telephoning Action technical support (703-669-1318).

Note that Custom Calibration (option C620) is available from the factory (settings **MUST** be within the units specifications). For a C620, specify the following:

- a) Input Frequency Range (for example: 0 to 5000Hz).
- b) Input Amplitude (for example: 2.5 Volts, Peak).
- c) Output Type and Range (for example: 4 to 20mA).

Function		S1		
	1	2	3	
Remote Cal	•	-	-	
Output				
0 to 10V	-	•	•	
0 to 20mA	-		-	
4 to 20mA	-			
Key: ■ = 1 = ON or Closed; - = n/a				

Function	
	1
Input Sensitivity	
High Range (500mVp to 150Vrms)	
Low Range (150mVp to 50Vrms)	
Key: ■ = 1 = ON or Closed; - = n/a	

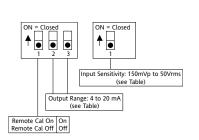

Default Switch Settings



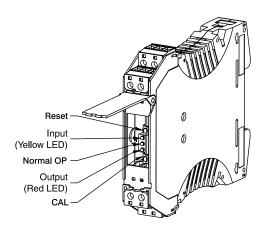


Figure 1: Switch Settings



Pin	Description
11	DC Power (+)
12	DC Power (-)
21	DC Power (+)
22	DC Power (-)
41	Input (+)
42	Input (-)
51	Output (+)
52	Output (-)

Figure 2: Wiring Connections

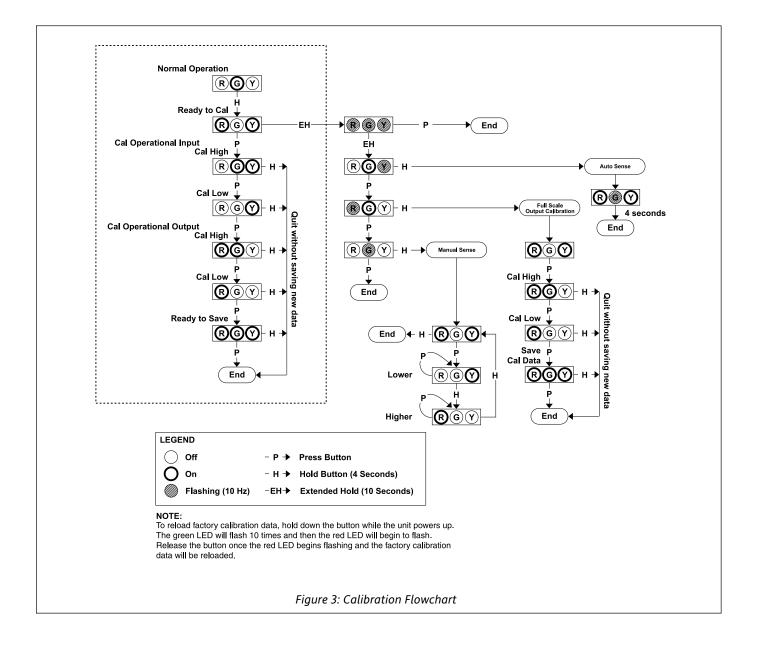

Specifications

Input:

Frequency Input Range: 0 to 10kHz

Minimum Input Span: 2Hz Amplitude (switch selectable): Low Range: 150mVp to 50Vrms High Range: 500mVp to 150Vrms

Output:

Voltage: 0 to 10VDC;

Source Impedance: 10 ohms

Drive: 10mA Current: 0 to 20mA

Source Impedance: >100k ohms
Compliance: 20V@20mA (1k ohms max)

Output Accuracy:

±0.05% of full scale local range

Response Time:

100mSec + 3 input cycles (10-90%) typical

Stability:

±100ppm of full scale/°C (±0.01%/°C)

Common Mode Rejection:

60Hz: >90dB DC: >120dB **Isolation:**

Input to Output to Power: 1800VDC

ESD Susceptibility:

Capable of meeting IEC801-2 level 3 (8kV)

Power:

9 to 30VDC

1W typical, 2W maximum

Host Module Interface:

IR Link

Size:

DIN rail case - refer to Dimensions drawing

Temperature Range:

Operating: 0°C to 60°C (32°F to 140°F) Storage: -25°C to 85°C (-13°F to 185°F)

Humidity Range:

Operating: 15% to 95% RHNC @ 45°C Storage: 90% RHNC @60°C for 24 hrs

Agency Approvals (EMC & Safety):

UL recognized per standard UL508 (File No.E99775)

CE Conformance per EMC directive 2004/108/EC and Low Voltage directive 2006/95/EC (Input < 75VDC, only).

RoHS Compliant

Note that detailed installation instructions are available on our website.

Ordering Information

Specify:

Model:

WV478-2000

- Optional Custom Factory Calibration (specify C620, see required settings under "Calibration, page 2).
- 3. Accessories.

C650

Accessories


All WV Series modules will mount on standard TS35 (model MD03) DIN rail. In addition, the following accessories are available:

WVC16 Communications Interface
MD03 TS35 x 7.5 DIN Rail (2 meters)
WV905 24VDC Power Supply (0.5 Amp)
H910 24VDC Power Supply (1 Amp)
H915 24VDC Power Supply (2.3 Amp)
MB03 End Bracket for MD03

Utility software for WVC16

Dimensions

Dimensions are in millimeters (inches)

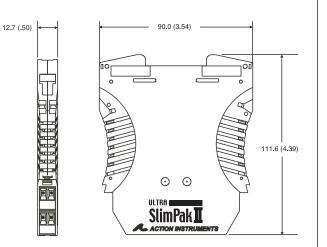

Eurotherm_®



by Schneider Electric

Schneider Electric Systems USA, Inc.

44621 Guilford Drive, Suite 100 Ashburn, VA 20147 703-724-7300

info.eurotherm.us@schneider-electric.com

www.eurotherm.com

Factory Assistance

For additional information on calibration, operation and installation contact our Technical Services Group:

703-724-7314

US.Support@schneider-electric.com

721-0806-00-I 09/06 Copyright© Eurotherm, Inc 2006